

Code RS232 Scanner Configuration

The Code RS232 (Serial) Scanner must be configured to work correctly with Gym Assistant.

No drivers need to be installed.

You can configure the scanner by scanning each one of the 2-D barcodes below in order.

Configure the Scanner

Connect the power supply to the scanner cable. The scanner will beep once.

Wait a few seconds for the the scanner to beep, which indicates the scanner is ready.

Press and hold the trigger as you aim the small blue square at the first barcode below.

Once the scanner beeps release the trigger.

Scan each of the remaining barcodes codes in order, pausing for a few seconds between each one.

Unplug the scanner, then plug it in again.



M20111_01

(1) Reset to Factory Defaults



M20112_01

(2) RS232 Defaults



M20163_01

(3) 9600 Baud



M20212_01

(4) Suffix Carriage Return

Select the Reader Port

In GateKeeper select Access Points / Ports from the Settings menu.

Click Find Reader, then scan the Test Barcode below. GateKeeper should tell you that “Reader was found on COMx”.



Test Barcode